



MX BENCH - ASSEMBLY


NO.	QTY	PART DESCRIPTION	NO.	QTY	PART DESCRIPTION
1	1	MAIN BENCH FRAME WITH UPHOLSTERY PADS ATTACHED	4	2	BOLT M10 x 75mm (Rear Frame)
			5	2	BOLT M10 x 95 mm (Front Foot)
2	1	WHEEL BASE	6	8	FLAT WASHER M14
3	1	FRONT FOOT	7	4	LOCKNUT M10


STEP ONE: The image below shows the Wheel Base in position to fasten to the Bench Frame. Place the Wheel Base with the wheels towards the top of the base. Insert the Bench Frame, with the Upholstery facing up, into the brackets on the Wheel Base. Place one flat washer onto each of the two M10 x75 mm bolts. Align holes of Wheel Base and Bench Frame, insert each bolt adding a flat washer and locknut. Very firmly tighten bolts/nuts with 17mm or 11/16in wrench.

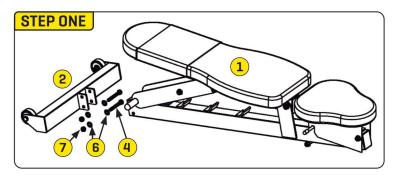

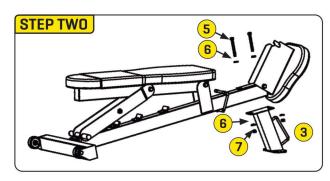

STEP TWO: Place the Front Foot tight against Bench Frame. Place one flat washer on to the each of the two M10 x 95 mm bolts. Align holes of the Front Foot and Bench Frame, insert each bolt adding a flat washer and locknut. Very firmly tighten bolts/nuts with 17mm or 11/16in wrench. Check and tighten all the bench back pad and seat pad bolts before use. IF BACK PAD MOVES OR FEELS LOOSE, TIGHTEN BACK PAD BOLTS. NOTE: Wheels should be just above floor when the MX Bench assembly is finished. If wheels are touching the floor, remove the Wheel Base, flip over and reassemble.

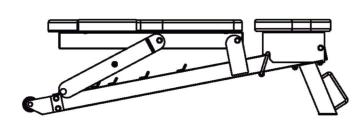

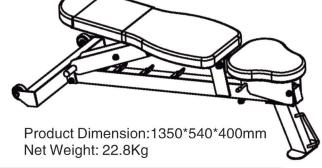

WARNING. SERIOUS INJURY CAN OCCUR ON THE EQUIPMENT. YOU MUST FOLLOW THESE PRECAUTIONS TO MINIMIZE INJURY.

- + Inspect equipment before each use for loose or worn parts (including frame, nuts, bolts and adjustment points).
- + DO NOT use if it appears worn or damaged and rectify any loose component before use.
- + Be mindful about the possibility of injury to yourself and others. Do not be careless.
- + Children should not be allowed near this equipment. Supervise teenagers.
- + If you have any questions on proper use of the equipment, do not use until you have had professional advice.

